

Wireless Settings



1. Enter Setting pages

2. Chose the Wifi Settings **- WiFi Settings** ,then click the Scan

Scan ,chose your wifi SSID and write in your wifi password:

The screenshot shows the 'SUNEYES IP Camera Options' interface. On the left is a navigation menu with 'WiFi Settings' selected. The main content area is titled 'WiFi Settings' and contains a 'Wireless Network List' table with two entries: 'suneyes[8C:21:0A:42:B2:CA] Manag WPA2-PSK(AES) Signal strength 100%' and 'ChinaNet-CFZd[E0:30:05:0A:13:08] Manag WPA2-PSK(TKIP) Signal strengtl'. Below the table is a 'Scan' button. Further down, there are fields for 'Using Wireless Lan' (checked), 'SSID' (suneyes), 'Network Type' (Infra), 'Encryption' (WPA2-PSK Personal (AES)), and 'Share Key' (suneyes1234). 'Submit' and 'Refresh' buttons are at the bottom.

3. Click **Scan** ,then remove the LAN Cable waiting for reboot

The screenshot shows the 'SUNEYES IP Camera Options' interface. The left navigation menu is the same as in the previous screenshot. The main content area displays a message: 'The camera is rebooting. Don't shutdown it's power. Please waiting ... 34'. The 'Back' button is visible at the bottom of the navigation menu.